

KneeRover® Knee Walker Jr. – Tools & Parts List:

The following tools and parts are included with your KneeRover® Knee Walker Jr. Please follow assembly instructions for your specific KneeRover® model, using the tools and parts provided.

Assembly videos for your KneeRover® model can also be found at:

kneerover.com/pages/assembly-video



**Knee Pad
Locking Pin**



**Steering Column Height
Adjustment Knob**

Ongoing Maintenance

We recommend saving the tools that are provided with your KneeRover® product, as you may need them to provide ongoing maintenance. With routine use, nuts and bolts on the KneeRover® knee walker can become loose. To ensure safe operation of your KneeRover® scooter, it is important to periodically inspect for loose nuts and bolts and re-tighten as appropriate.

Please visit kneerover.com/pages/kneerover-maintenance-videos for additional support in maintaining your KneeRover® product.